


	PRESET NAME	
	CHANNEL 1	CHANNEL 2
AMP 1	BS18	M10-cut A03
AMP 2	BS18	M10-cut A03

LEFT SIDE

RIGHT SIDE

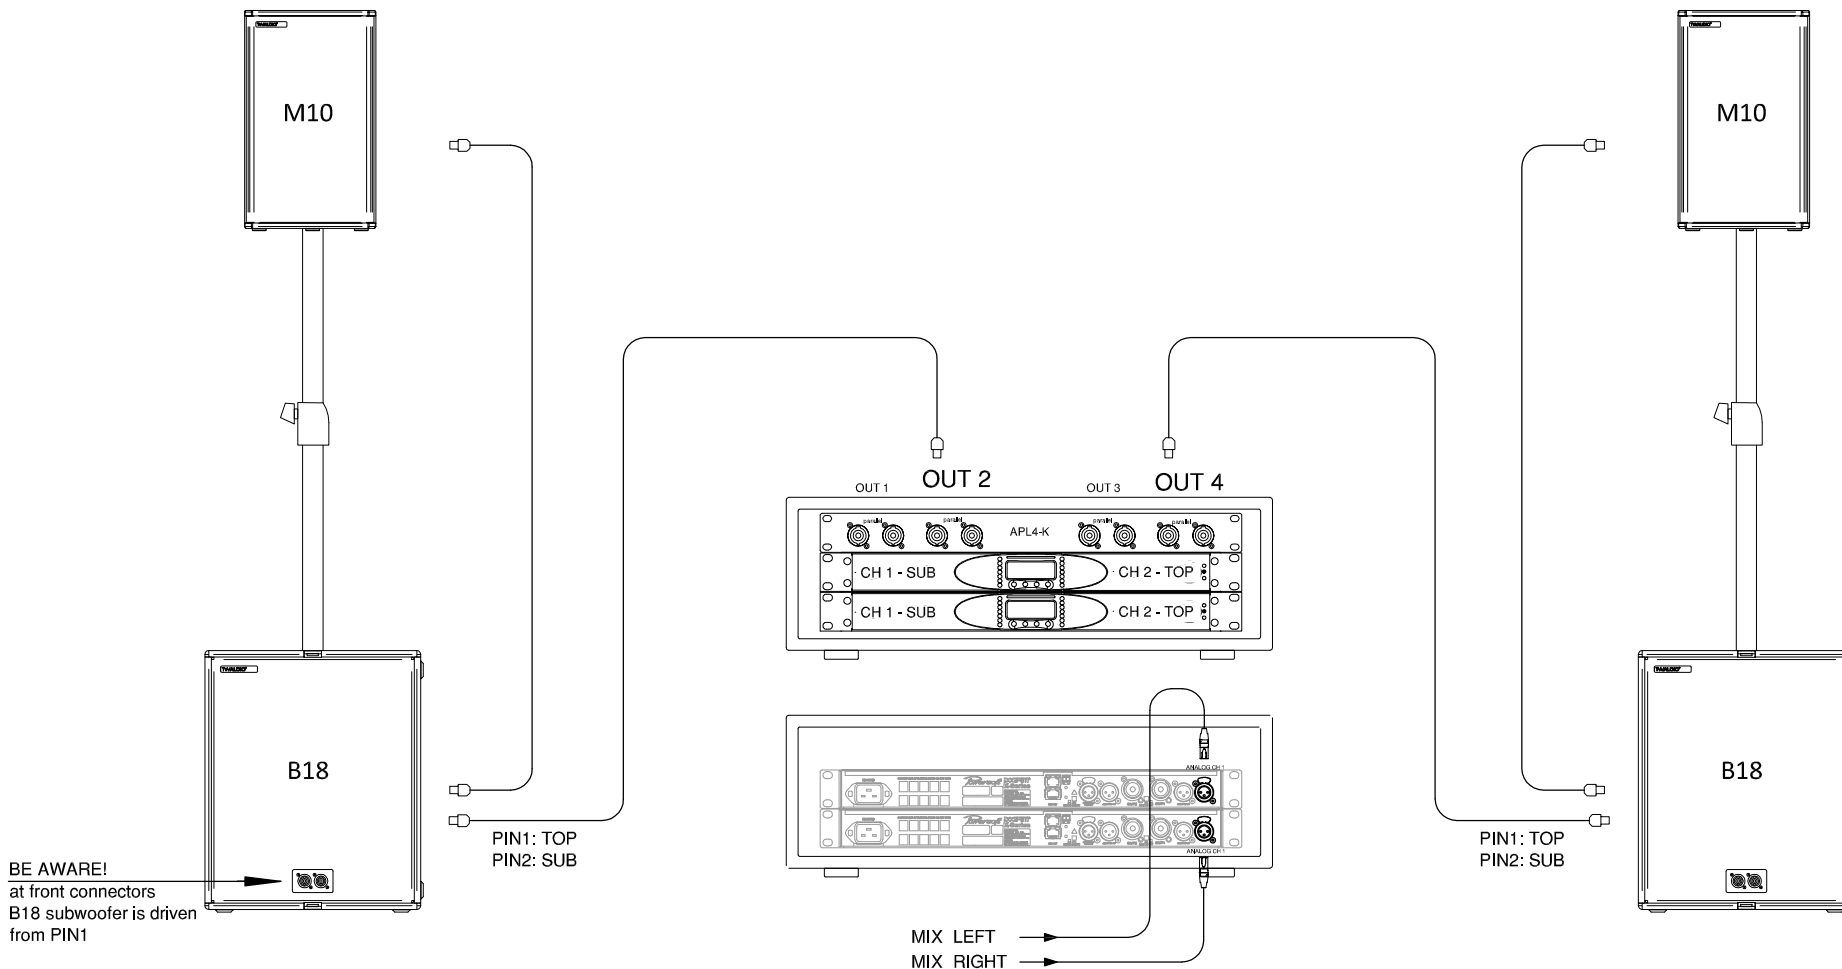

BE AWARE!
at front connectors
B18 subwoofer is driven
from PIN1

PIN1: TOP
PIN2: SUB

MIX LEFT
MIX RIGHT

2 x LSK-44-025 2,5 m

2 x LSK-44-200 20 m